





ThrottleCard's Landscape Mode on iPhone is specially designed to work with handheld gaming controllers and works with a variety of brands.



Button Map:

Left D-Pad:

Left/Right - - - Previous/Next Throttle Up/Down - - - Previous/Next Turnout

Left Joystick:

Depress to Toggle Fast Clock/Current Speed

Right Joystick:

Left/Right - - - Direction Selection

Up/Down - - - Speed Increase/Decrease

Depress - Emergency Stop

Y - - - Toggle Mute

B - - - Toggle Bell

A - - - Whistle/Horn

X - - - Toggle Headlight

L1 - - - Close Selected Turnout

R1 - - - Throw Selected Turnout

L2 - - - Decrease 5 Speed Steps

R2 - - - Increase 5 Speed Steps

L2 + R2 - - - Idle Selected Train



Xbox Controller Button Map





Nintendo Controller Button Map





RECOMMENDED GAME CONTROLLERS:

Image	Controller	Price Tier	View on Amazon As an Amazon Associate, we may earn a commission if you purchase through these affiliate links.
	NinjaPlusOX Mobile Game Controller*	\$\$	https:// www.amazon.com/ dp/B0DP3YRBMG? tag=gsvsoftware-20
	PlayStation**	\$\$\$	https:// www.amazon.com/ PlayStation- DualSense®-Wireless- Controller-White-5/dp/ B0CQKLS4RP? tag=gsvsoftware-20
	Xbox**	\$\$\$	https:// www.amazon.com/ Wireless-Controller- Robot-VGSION-Battery/ dp/B08XPY3K9Q? tag=gsvsoftware-20
BACHBORE DE	Backbone* (Requires iPhone 15 or newer) This supports passthrough charging via the device's USB-C Port	\$\$\$\$	https:// www.amazon.com/ BACKBONE-Mobile- Gaming-Controller- Android-iOS/dp/ B0CCT2LWT8? tag=gsvsoftware-20

^{*}Ideal for iPhone Landscape Mode
**Ideal for Large Format Devices (iPads/Macs)